

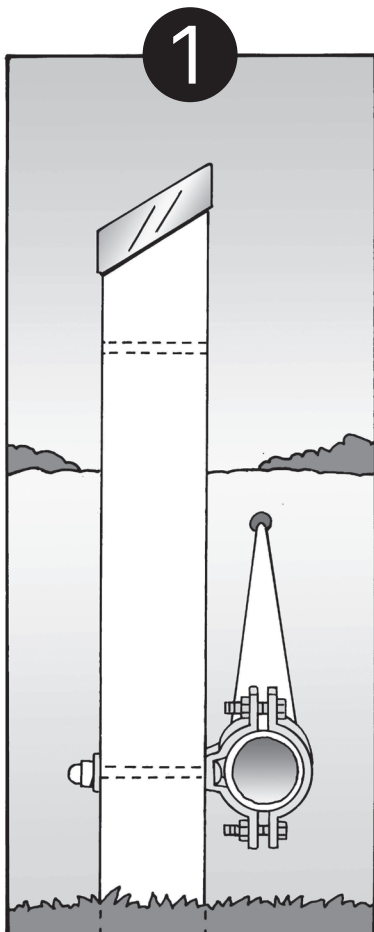



Installation Instructions for Clamp Fittings

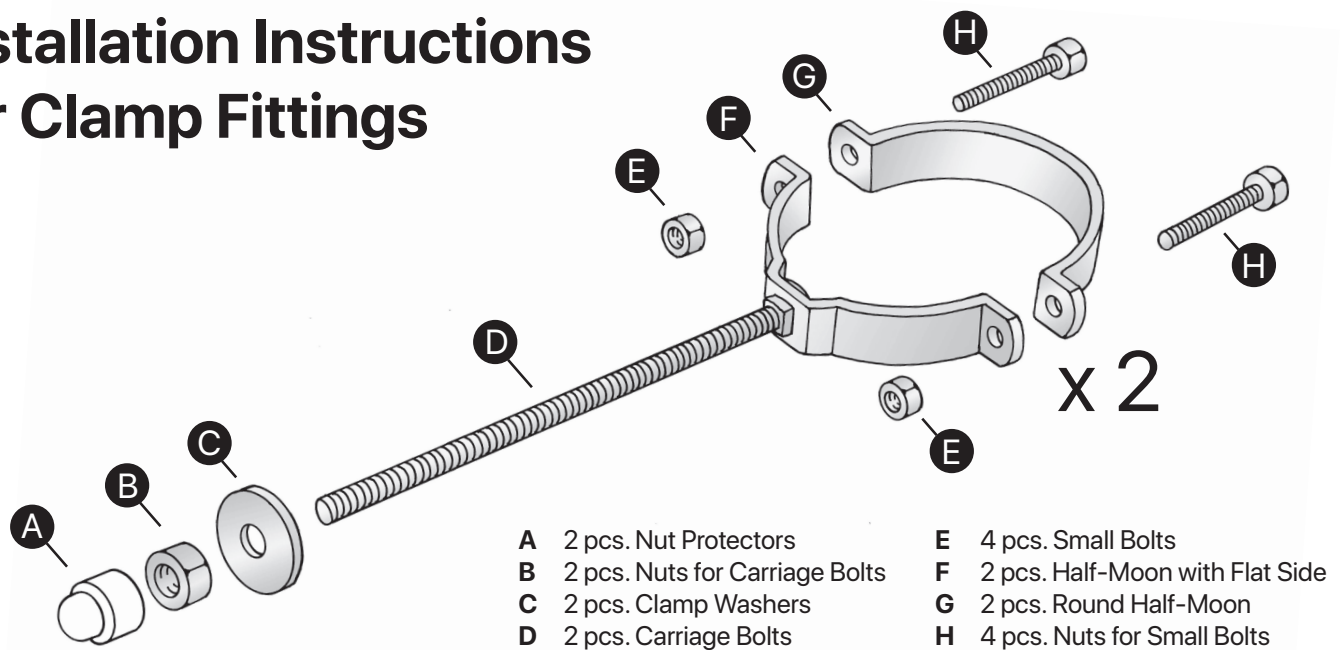

Mount the half-moons with the flat side on the carriage bolts and insert the bolts through the holes in the support. Fit the clamp washers and tighten loosely with the nuts.

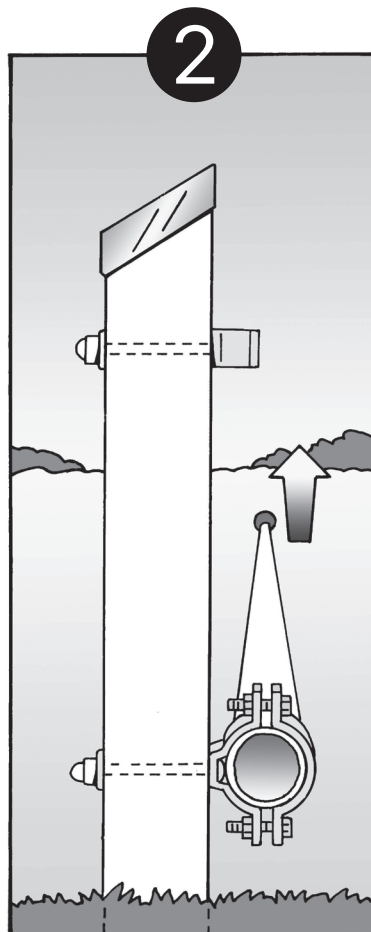

Place the flagpole in the lower half-moon and attach the outer half-moon. The half-moons are fastened with the small bolts and nuts. The fitting should be mounted approx. 10–15 cm from the bottom of the flagpole.

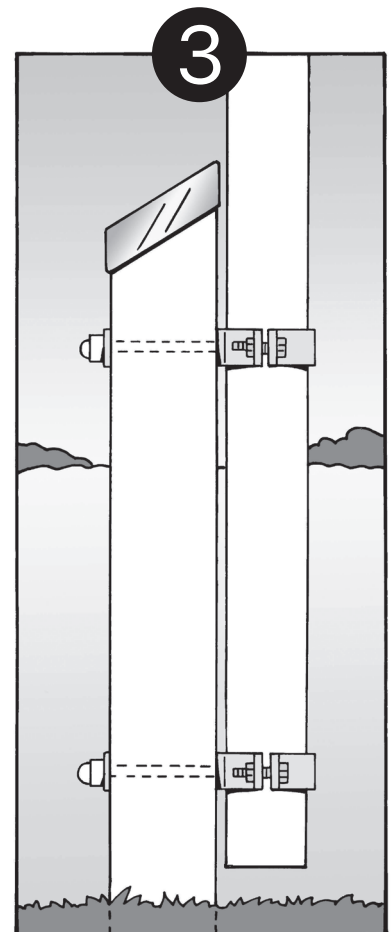

Raise the flagpole and place it in the upper fitting. Attach the outer half-moon to the flagpole and fasten with the small bolts and nuts.

Tighten all nuts.

It is very important that the half-moons are only tightened enough to grip the flagpole, and not so much that the round profile of the flagpole is deformed, as this will weaken the flagpole.

FORMENTA

Bredastensvägen 16, 331 44 Värnamo, Sweden
 +46 370-69 25 50
 www.formenta.se